



Top Left

Top Middle

Top Right

## Heating / Cooling mode

No function

Increase target temperature for current mode

### Edit Time Mode

Increase item

No function

Increase item

### Time Mode

Select Alarm profile  
Off, 1, 2 or 3

No function

Enable \ Disable  
sunset and Sunrise actions

### Button Mode

Single button action  
(short or long press)

No function

Single button action  
(short or long press)

Middle Left

Middle Right

Change Zone Previous Item Previous Item Page Left Living Kitchen Hallway Study Page Right Next Item Next Item Change Zone

Single button action  
(short or long press)

Short Press - Change mode  
Long Press - Lock & unlock buttons

Single button action  
(short or long press)

Long press  
Enable / Disable  
Alarm 1

Short Press - Change mode  
Long Press - Edit times

Long press  
Enable / Disable  
Alarm 2

Decrease item

No function

Decrease item

Select thermostat mode  
Anti-Freeze  
Night  
Day  
Comfort

Short Press - Change mode  
Long Press - Edit target temperatures`

Decrease target temperature for current mode

Bottom Left

Bottom Middle

Bottom Right

When no longer needed on a daily basis, please remove this guide and store for future reference